

Purpose: To provide a quick reference to jog your memory on use of Pro-Bot.

The Pro-Bot user guide provides comprehensive instructions. These are a reminder of some of the useful tips.

- **Remove batteries** (3 X 1.5V AA batteries), including the backup battery (C2032), from Pro-Bot when not in use for more than a couple of days.
- To **stop** Pro-Bot in the middle of a program press the **Go key** again.
- To **insert a command** move the cursor onto the command you want to insert after.
- To **delete whole program** hold Clear key down for 3 seconds and use scroll keys to select required option.
- Omitting a number after repeat key will execute a procedure or command 255 times.
- To make a **regular polygon** divide 360 by the number of sides of the polygon and turn that number of degrees at each step.
- To **redefine a procedure** use new procedure command and choose the number of the procedure you have used before. (This is quicker than edit procedure.)
- Holding down menu button for 1½ seconds gives you list of **special commands** to make sounds and turn on headlights.
- To start Pro-Bot moving with a hand clap (or other sound) insert pause 499 at the start of your program. (This assumes you have turned sensors on.)